



DisplayPort 1.2 One (1) fiber optical extender with Copper Extension **DPFX-700-TR**

Description

DisplayPort 1.2 one(1) fiber optical detachable extender with copper extension, DPFX-700-TR, extends DisplayPort 1.2 signal up to 200m (656feet) and transmits 4K UHD (4096x2160) at 60Hz over one(1) LC multi-mode fiber(OM3). Cutting-edge technology of Opticis reduces limits in installation by providing an option for longer copper extension.

DPFX-700-TR transmit uncompressed and transparent data signal even when used with up to 2 m copper cable as an intermediary. This enables installation of the product in the limited spaced area in such our small module type extender cannot be used. 2m copper cable is provided in the shipping group.

Furthermore, to meet all the needs of the customers, DPFX-700-TR is fully compatible with using DPFX-300 as a pair. Depending on the circumstances, customer can choose to use direct connection type module on one side, and copper extension type module on the other side.

DPFX-700-TR gives slim, light, and easy installation with perfect electrical isolation, but without electrical hazard and interference. It is operated external DC power adapter which is supplied in the shipping group.

Specification

- Supports **DisplayPort 1.2** standards
- Extends up to **4K (4096x2160) at 60Hz**, (RGB & YCbCr : 4:4:4)
- Transmits DisplayPort 1.2 data up to **200m (656feet) over one (1) LC multi-mode fiber (OM3)**
- **Extra copper extension** available up to **2m** on each side (TX/RX)
- **Fully compatible** with using DPFX-300 as a pair
- **Power Rack (BR-400)** available for mounting up to 8 units
- Offers total data rate **21.6 Gbps** (5.4Gbps per lane)
- Supports **Multi-Stream Transport**
- Plug & Play
- Data security with negligible EMI emission
- Label color distinction: TX (silver) & RX (black)
- Certifies FCC and CE standards for EMI/RFI emission

Applications



- Medical imaging
- Military
- Digital Signage
- Control room
- Simulator
- Rental staging

DisplayPort 1.2 One(1) fiber optical extender with Copper Extension DPFX-700-TR



Technical Features

Resolution	Up to 4K(4096x2160) at 60Hz,
Bit rate	Up to 5.4 Gbps/ch
Maximum distance	Up to 200m (656feet)
Fiber	1 LC multi-mode fiber (OM3)
AUX Channel	Direct AUX Channel
Power supplying	External DC power 5V/1A
LED Indicators	TX: power, signal transmission RX: power, signal detection
Power consumption	<2.5W
Operating temperature	0°C to 50°C
Operating humidity	10~85% RH, non-condensing
Size (LWH)	39 x 76 x 20 mm

Dimension [mm]

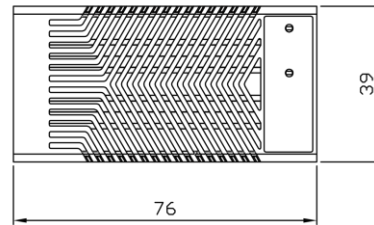


Size (LWH): 39 x 76 x 20mm



Connection Diagram

4K UHD(4096x2160) @60Hz up to 200m (656ft)

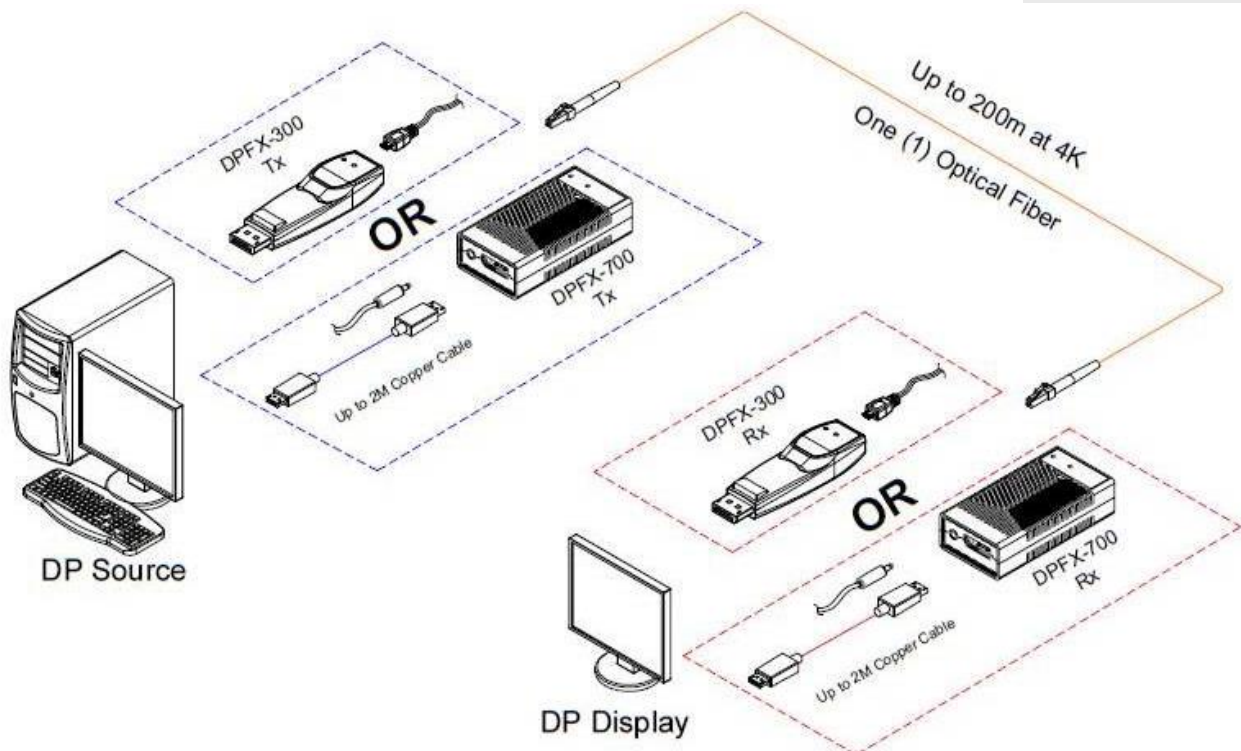

Opticis Co., Ltd.
 3F, 305, Sanseong-daero, Sujeong-gu
 Sungnam-si, Gyeonggi-do, 13354 South Korea
 Tel: +82 (31) 719-8033
 Fax: +82 (31) 719-8032

tosales@opticis.com



All contents are subject to be changed without prior notice.